

INFLATABLE INSTRUCTIONS



SETUP INSTRUCTIONS

1. Unroll the inflatable. The blower tubes indicate the back of the inflatable.



2. Unfold the inflatable & make sure all zippers & flaps over zippers are completely closed.



3. Connect the blower by pulling the tube over the neck of the blower & securing strap tightly. Fold the unused blower tube in half & strap tightly. DO NOT turn on blower.



4. Locate tethers and place anchors thru the ring. Pull tightly and hammer stakes 70% into ground. DO NOT turn on blower.



5. Before inflating, you must ensure that winds do not exceed 15 mph. After all steps are completed, you may turn on the blower.

WEATHER

Don't let the ride lay in the rain. It will become too heavy to lift or roll. Deflate & cover with a tarp or turn it up-side down so water doesn't fill up the bottom of the ride.



The ride will become a hot air balloon if you inflate it in the wind without staking. **DO NOT OPERATE IF NOT PROPERLY STAKED DOWN. Max wind speed 15 mph.**



Do not operate inflatable in heavy rains, lightning or winds in excess of 15 mph.

NOTE: If placed in full sun, the inflatable unit will become very hot & can cause burns to skin. Please take precautions to prevent injury.

Takedown Instructions

To deflate the ride, keep the ride anchored & other people away from the ride.

A. Locate the deflation zipper and open.

B. Locate the blower switch and turn off the blower, and remove blower from tube.

C. Open the strap on the second blower tube and allow the inflatable to deflate.



Rolling up inflatable: Follow pictures left to right



Troubleshooting

- Your inflatable may have two blower tubes, but only requires one blower. Fold the unused tube and strap securely to prevent air from escaping.
- If the ride does not inflate properly, it is most often due to a zipper or Velcro flap on the bottom side of the ride being open. Look underneath and close tightly.
- If the blower tube is twisted or leaking, the ride will not inflate properly.
- If you are using an extension cord that is too small, the blower will not get enough speed to inflate the ride.
- If the blower won't start, check your plug for a GFI test button. Also, check your breaker to make sure it hasn't tripped.
- Blowers require a 20 amp circuit to start.
- Air leaking from the seams of the inflatable is completely normal. This is necessary because the blower is constantly blowing air into the unit.
- Liners can sometimes pull loose with use and will trap debris or leaves in the Velcro. If this happens, you can run a brush through the Velcro to clean it and reattach the liner.
- Make sure your water hose is clean and clear of debris before attaching it to a water slide. Any trash in your hose can clog the unit's attached hose and prevent water from spraying onto slide.

Safety Rules

1. No shoes, eyeglasses, hard or sharp objects allowed.
2. No flips, wrestling, running or pushing.
3. No bouncing against sides or entrance.
4. No food, drinks, gum, pets or silly string. **YOU WILL BE CHARGED FOR SILLY STRING DAMAGE.**
5. No smoking in or around inflatable.
6. No hanging on inflatable.
7. Exit if inflatable begins to lose air.
8. Shut down unit and call emergency number if unit becomes damaged.
9. Unload riders and deflate unit if winds exceed 15 mph.
10. Units designed for dry use are not to be used wet.
11. Do not allow riders to gather in top of a slide causing it to sway or tilt.
12. Do not allow riders to slide head first or 2 at a time.
13. Allow only compatible age groups to use unit at the same time.
14. Adult supervision is required at all times the inflatable is in use.
15. Do not use inflatable if you are pregnant, have heart, neck or back problems.

Emergency Number:

256-504-2017